**Quiko Italy** Via Seccalegno, 19 36040 Sossano Vicenza - Italy tel. +39 0444 785513 fax. +39 0444 782371 www.quikoitaly.com





### دليل الاستخدام والصيانة


هذا الجهاز ليس مخصص للإستخدام من قبل الأشخاص ( بما في ذلك الأطفال ) الذين يعانون من ضعف في القدرات الجسدية و الحسية أو العقلية

تحذير: تعليمات السلامة الهامة. ومن المهم لسلامة الأشخاص اتباع هذه التعليمات. وفر هذه التعليمات

تحذير: تعليمات السلامة الهامة. اتبع جميع التعليمات لأنّ التثبيت غير الصحيح يمكن أن يؤدي إلى إصابة شديدة

# CE

# QK-CE220RLX CONTROL BOARD FOR SINGLE-PHASE / THREE-PHASE MOTORS

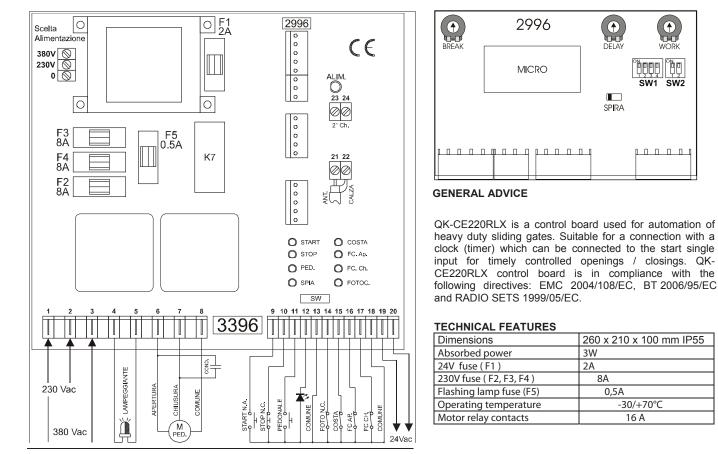

## ADVICES AND SUGGESTIONS FOR INSTALLATION

#### ATTENTION:

It is necessary to respect the polarity of the phases in the 230VAC connection (connector 1 = phase, connector 2 = neutral). The n. c. contacts (limit switches, photocells and stop push button) if not used, must be connected to the common (connector 13) using bridges

#### CONNECTIONS TABLE

CONNECTIV	JONNECTIONS TABLE					
1 – 2 ALIMENT.	230 Vac 50/60 Hz mains power supply (1 phase, 2 neutral)	12 – 13 SPIA	Opened gate lamp / courtesy lamp output ( see dip switch).			
1 – 2 - 3 ALIMENT.	380 Vac three-phase 50/60 Hz mains power supply	14 – 18 FOTO	Photocell input (n.c. contact). It stops and reverses the motor and it is only enabled during closing.			
4 – 5 FLASH	Flashing light output (fixed). 230 Vac max 100 W	15 – 18 COSTA	Safety edge input (n.c. contact) . It stops and reverses for 10cm the motor and it is only enabled during opening.			
6 – 7 – 8 M	230/380 Vac 1 KW Max 1 HP motor output (7 close, 8 common, 6 open)	17 – 18 FC AP.	Opening limit switch input (n.c. contact).			
9 – 13	Start signal (n.o. contact) . During opening it stops.	16-18	Closing limit switch input (n.c. contact)			
START	During closing it stops and reverses. If <b>"OPEN ONLY" function</b> is enabled (see page 2) this contact will work as OPEN ONLY.	FC CH.				
10 – 13 STOP	Stop signal (n.c. contact). It always stops the motor. If pushed during pause it disables the automatic closing.	19 – 20 ALIMENT.	24 Vac 500mA accessories power supply			
11 – 13 PED.	Pedestrian start signal (n.o.contact). It performs the partial opening adjustable by means of delay trimmer. If "CLOSE ONLY" function is enabled (see page 2) this contact will work as CLOSE ONLY.	21 – 22	Not used			
380 230	Mains voltage selection: 230 Vac 0 – 230	23 – 24	Not used			
0	380 Vac 0 – 380					

#### **FINAL TESTING**

#### • Check the connections of the motor bearing in mind that at first start up the motor should open.

#### SETTING THE DIP-SWITCHES

#### ATTENTION: The dip switches should be programmed when the control board is switched off.

		ON	OFF
SW1	1	Slide gate mode	Not used
	2	Courtesy lamp mode enabled (90 seconds).	Opened gate lamp mode enabled.
	3	Condominium mode enabled. It doesn't accept start signals during opening. If a start signal is given during pause, the pause time gets reset and the gate closes.	Condominium mode disabled
	4	Automatic closing enabled.	Automatic closing disabled.
SW2	1	Not used	Not used
	2	Electric lock release function enabled	Electric lock release function disabled

#### WORKING TIME SETTING:

- 1) Make sure that the dip switch SW1 1 is on.
- 2) Adjust the WORK trimmer to modify the working time. It is possible to set it from 4" to 200".
- 3) It is possible to use the pedestrian opening (partial opening), adjustable by means of DELAY trimmer (from 2" to 15").

#### AUTOMATIC CLOSING TIME SETTING (PAUSE TIME):

- 1) Make sure that the dip switch SW1 4 is on.
- 2) Adjust the BREAK trimmer to modify the automatic closing pause time. It is possible to set it from 4" to 90".

#### OPEN ONLY AND CLOSE ONLY FUNCTION SETTING

Inserting a diode in the SPIRA connector, considering the polarity, it is possible to assign to the START button the OPEN ONLY function and to the PEDESTRIAN start button the close only function. Step-by-step function would then be disabled

#### **RADIO RECEIVER CONNECTION**

#### For the connection of the radio receiver refer to the user manual of the QK-R02.